 


**BBPGlobal**  
Add voice to your internet

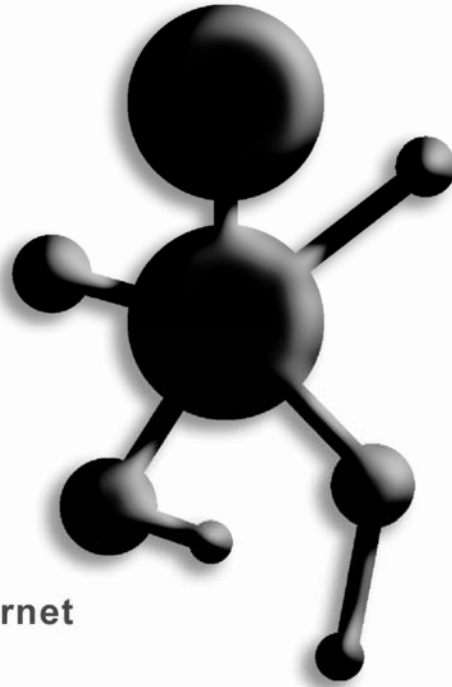


# NetComm NB9 / NB9W Configuration Instructions

Version 1.0

## Configuration Instruction for NetComm NB9 / NB9W
 
### A. Physical Connection

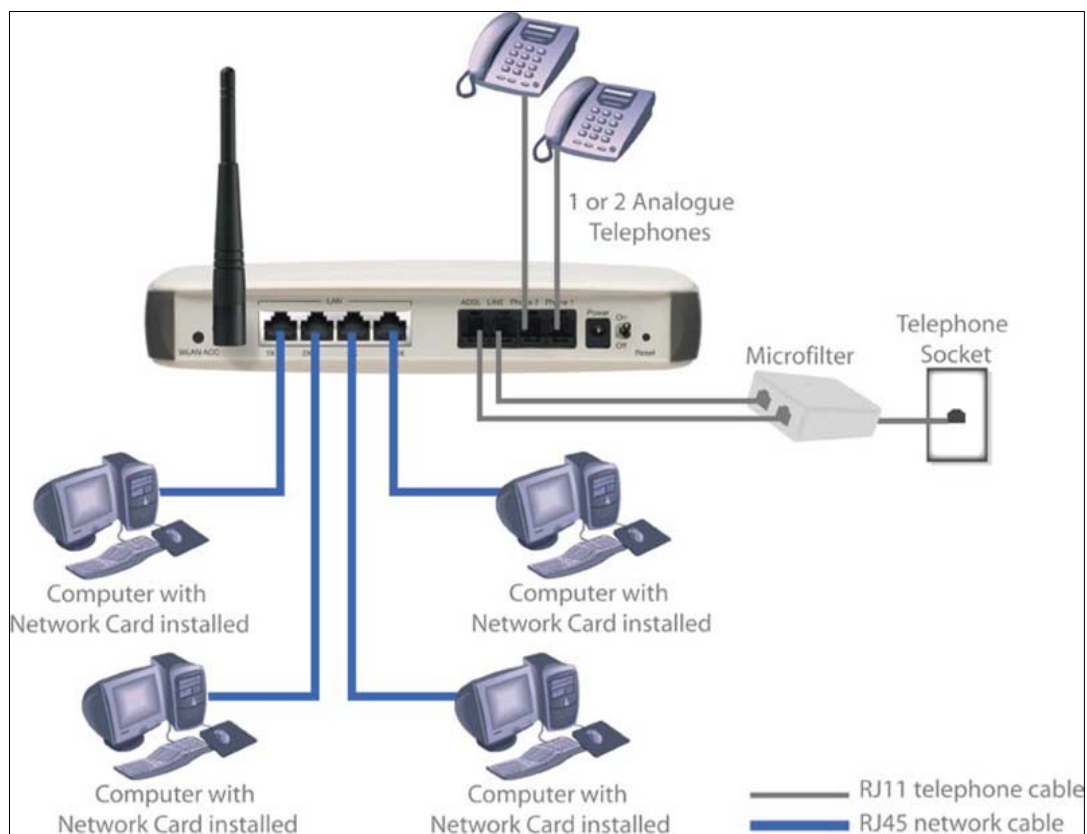

### B. Configuration

1. Open Internet Explorer and type <http://192.168.1.1> on the address bar.
2. Username: admin
3. Password: admin
4. Press Enter

### C. ADSL Setup

Basic > ADSL Quick Setup

Protocol:

User ID:

 
Password:

VPI:

VCI:

## D. VoIP Setup

### 1. Enter Information as illustrated

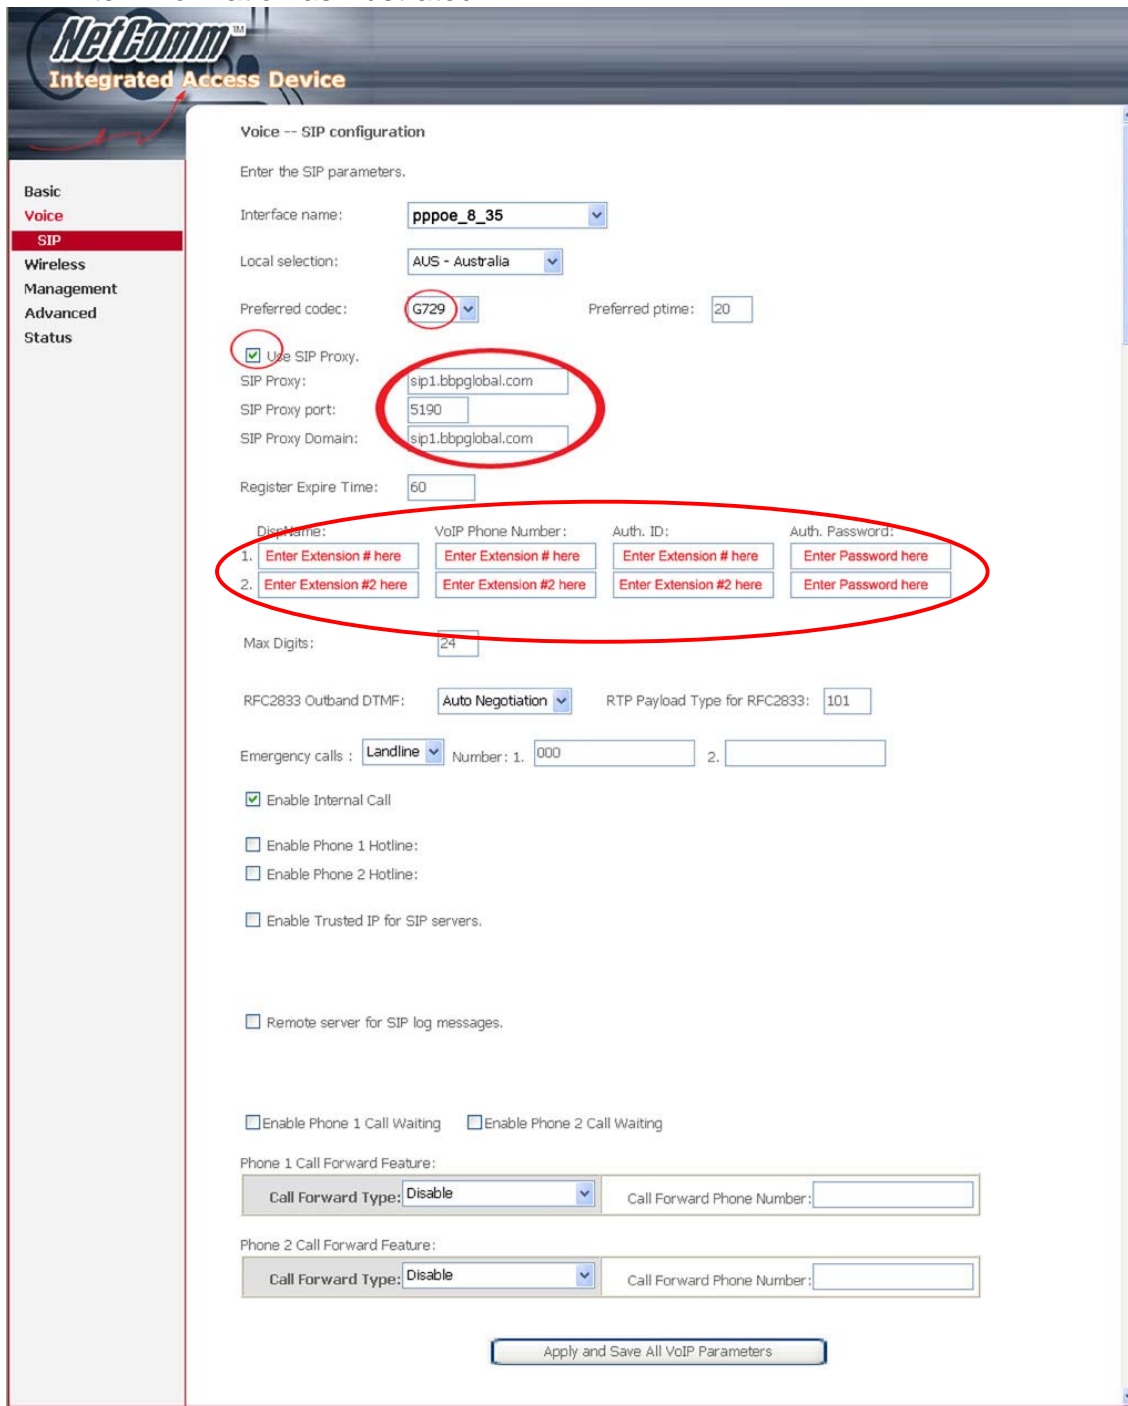

**NetComm™ Integrated Access Device**

Voice -- SIP configuration

Enter the SIP parameters.

Interface name:

Local selection:

Preferred codec:  Preferredptime:

Use SIP Proxy.

SIP Proxy:

SIP Proxy port:

SIP Proxy Domain:

Register Expire Time:

DispName:	VoIP Phone Number:	Auth. ID:	Auth. Password:
1. <input type="text" value="Enter Extension # here"/>	<input type="text" value="Enter Extension # here"/>	<input type="text" value="Enter Extension # here"/>	<input type="text" value="Enter Password here"/>
2. <input type="text" value="Enter Extension #2 here"/>	<input type="text" value="Enter Extension #2 here"/>	<input type="text" value="Enter Extension #2 here"/>	<input type="text" value="Enter Password here"/>

Max Digits:

RFC2833 Outband DTMF:  RTP Payload Type for RFC2833:

Emergency calls :  Number: 1.  2.

Enable Internal Call

Enable Phone 1 Hotline:

Enable Phone 2 Hotline:

Enable Trusted IP for SIP servers.

Remote server for SIP log messages.

Enable Phone 1 Call Waiting  Enable Phone 2 Call Waiting

Phone 1 Call Forward Feature:

Call Forward Type:  Call Forward Phone Number:

Phone 2 Call Forward Feature:

Call Forward Type:  Call Forward Phone Number:

### 2. Click “Apply and Save All VoIP Parameters”

### 3. Plug a touchtone phone onto the Phone 1 socket (and Phone 2 if configured) and dial.